


90° OUTSIDE CORNER DETAIL (41" AND 28" SERIES)

Note: Top row of blocks are shown in RED and have been cutout to show location of knobs on bottom row of blocks


Remove part of 10" knob with chop saw to allow for proper alignment

Remove part of 6" knob with chop saw to allow for proper alignment.

Alternate construction practice would be to offset freestanding block $\pm 1"$ to avoid cutting knob. Note, this will result in a small offset to the bond beam down the wall.

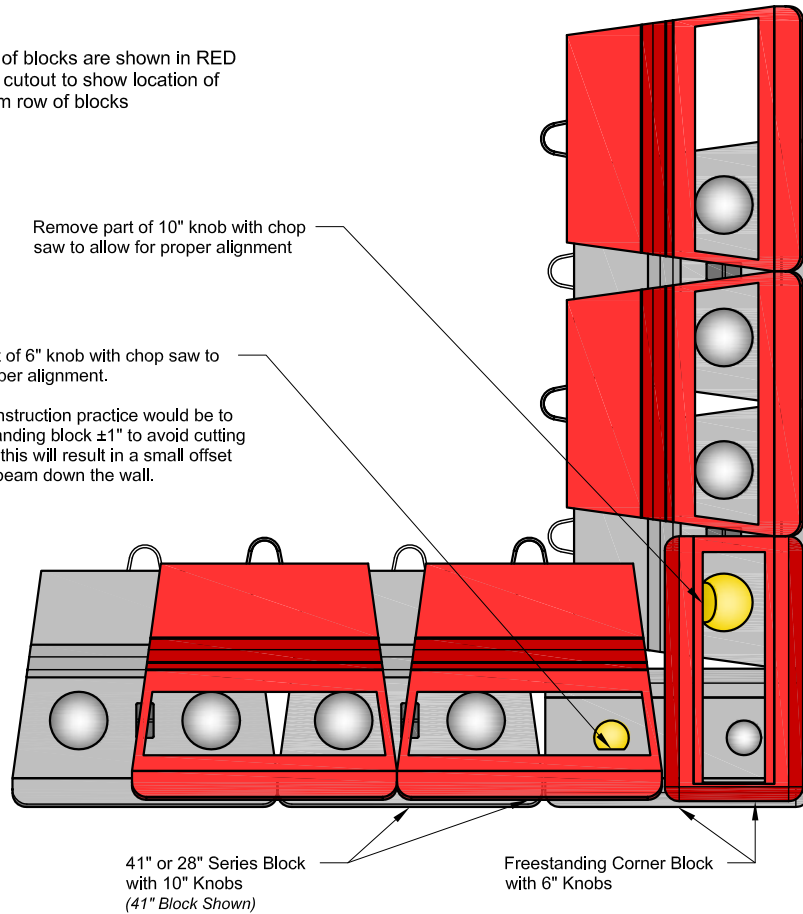

TOP VIEW
(NO SCALE)

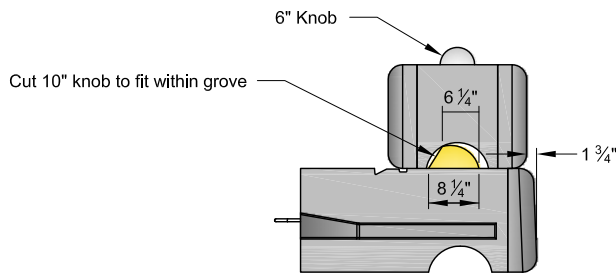

SIDE VIEW
(NO SCALE)

DRAWN BY:	JRJ
APPROVED BY:	JRJ
DATE:	06-22-2015
SHEET:	1 of 1

TITLE:	90° Outside Corner Detail Trimmed Knob Option
FILE:	2 90deg Outside Corner Detail - Trimmed Knob 062215.dwg

REDI-ROCK®
05481 US 31 SOUTH, CHARLEVOIX, MI 49720
(866) 222-8400 ext 3010 • engineering@redi-rock.com
www.redi-rock.com